 
 
 


INSTALLATION

1. Placing the SAFE in it's final location.
2. Draw on the wall and into the ground the anchors (fig. A) and remove the box.
3. Perforations to make the appropriate cues that we are going to use. (fig.B)
4. Clean the perforations.
5. Inserting the screws. (fig.C)
6. Placing the safe again in it's final position and screw from the inside. (fig. D)



DESDE 1845

www.arcasolle.com

ARCAS OLLE, S.L.

Apdo. Correos 498
08700 IGUALADA
Tel./Fax 93 805 05 00

C/ Alessandro Volta, parc. 49
Pol. Ind. Els Plans d'Arau
LA POBLA DE CLARAMUNT (BCN)
info@arcasolle.com

WARRANTY CERTIFICATE

IMPORTANT

To make this Warranty Certificate valid, it should be filled with SALES DATE, SIGNATURE AND COMPANY'S SEAL, and accompanied by PURCHASE'S INVOICE.

WARRANTY COVERAGE

This product has 2 YEARS warranty, from the SALES DATE specified in the company, against all production's default. This warranty covers the repair (labor and spares) of any production's default concerning its operation. The manufacturer covers the travel expenses until the sixth month from the purchase's date. The troubleshooting found due to an incorrect use, humidity and salinity excess, water seepage or cement, shocks, falls, negligence, ignore installation instructions, as well as any repair or manipulation done outside our personal ARCAS OLLE. S.L. TECHNICAL ASSISTANCE SERVICE (TAS), are excluded from the warranty.

WARRANTY USE

The Warranty Certificate keeps on user held, in case of a troubleshooting to show it to our ARCAS OLLE. S.L. TECHNICAL ASSISTANCE SERVICE (TAS), who once repaired, checked and verified, will leave your safe in perfect working and using conditions.



DESDE 1845

OPERATING INSTRUCTION MANUAL

serie EOS

OPENING THE SAFE

To open the safe first time, remove the battery holder cover (with logo OLLE), insert the tubular key and turn clockwise, meanwhile, turn the knob clockwise to open the safe.



INSTALLING THE BATTERIES

The safe requires 4 X "AA" (1.5V) batteries. Install the batteries. Ensuring the batteries are fitted correctly. (Batteries are included inside the safe). Use of alkaline batteries is recommend.

PROGRAMMING THE CODE

1. With the safe door open, press the red button on the back of the door. Release it and you will hear two beeps. The yellow light will be on at the same time.



2. Now input your personal code from 3-8 digits using any number from "0" to "9", and then press "*" or "#" to confirm it within 15 seconds. The safe beeps 3 times and the yellow light will be off, your personal code is now set.

3. Write down the code you set immediately and check whether your code has been programmed or not while the safe door open.

USING YOUR SAFE

To open the safe, enter your personal code followed by the letter "*" or "#", you will hear a beep and the green light will be on, and then turn the knob in clockwise direction to open the door within 5 seconds.

Note: Each press the yellow light will flash with a short beep, indicating that micro processor confirmed it. If the yellow light keep on flashing with the beep means the code is wrong. Three times' wrong code will result the micro processor refuse to accept the input for 20 seconds, if press three times' wrong code again will result the micro processor refuse to accept for 5 minutes.

To close the safe, just turn the knob in anticlockwise direction to lock it.

BATTERY REPLACEMENT WARNING

When you input your personal code to open the safe, if the red lights is on with green light, it means the batteries are low and you should change the batteries. To be sure the batteries are installed correctly. Please have a test before you close the door. Use ok alkaline batteries is recommended.

HOW TO USE YOUR OVERRIDE KEYS

For your convenience, we have engineered a manual override system for your safe, we supply 2 pcs override keys. These keys allow you to open the safe at all times, even when the batteries are run out or when you have forgotten your code. The keyhole is situated behind the battery holder cover, take off the cover, insert the override key and turn anticlockwise, and then open the safe as usual.

WARNING:

a) Please keep the override keys of the safe in another safety place and do not inside the safe.

